

Bumpers, servicing

Front bumper, removing and installing

1 - Hex-head screw (four)

- ◆ 10 Nm (7 ft lb)

2 - Carrier

3 - Plastic foam

4 - Plastic insulator


5 - Guide

- ◆ Remove or install cover -8- by pulling out of or pushing into both guides (left and right) in parallel

6 - Front side marker light -M11-

7 - Spreader rivet

- ◆ Connects cover to wheel housing liner

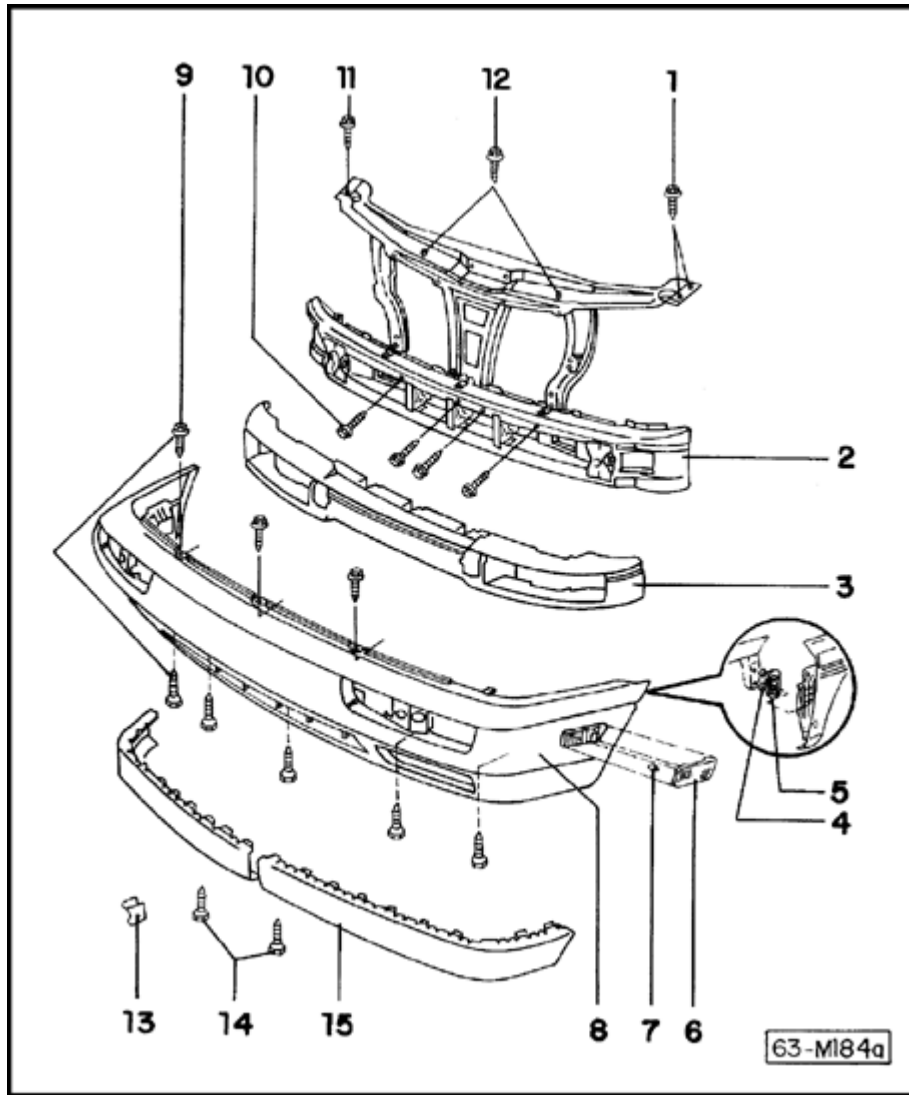

8 - Cover

- ◆ Material: PP/EPDM
- ◆ Removing and installing ⇒ [Fig. 1](#)
- ◆ Towing eye cover, removing and installing ⇒ [Fig. 2](#)

9 - Hex-head screw

- ◆ Qty: 8
- ◆ 23-25 Nm (17-18 ft lb)

10 - Hex-head screw

- ◆ Qty: 4
- ◆ 30 Nm (22 ft lb)

11 - Hex-head screw

- ◆ Qty: 2
- ◆ 5 Nm (44 in lb)

12 - Hex-head screw

- ◆ Qty: 2
- ◆ 10 Nm (7 ft lb)

13 - Cover element

- ◆ For painted covers only


14 - Hex-head screw

◆ Qty: 5

◆ 4.5 Nm (40 in. lb)

15 - Spoiler


◆ Fits into cover

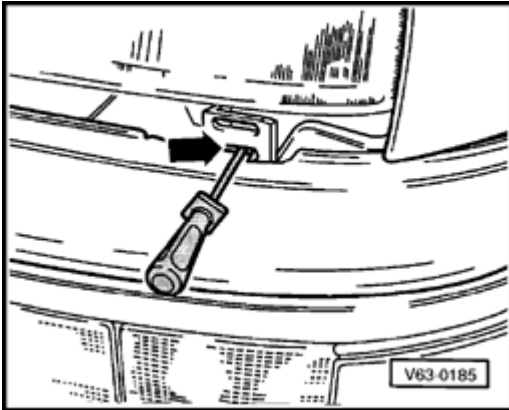

A

Fig. 1 Removing and installing, cover

- Remove radiator grille and spreader clips.
- Remove (eight) hex-head screws.
- Disconnect air guides from bumper cover.
- Disconnect harness connectors.
- Push down on left and right retainers (arrow) with screwdriver and pull bumper cover out of side guides, keeping cover parallel.

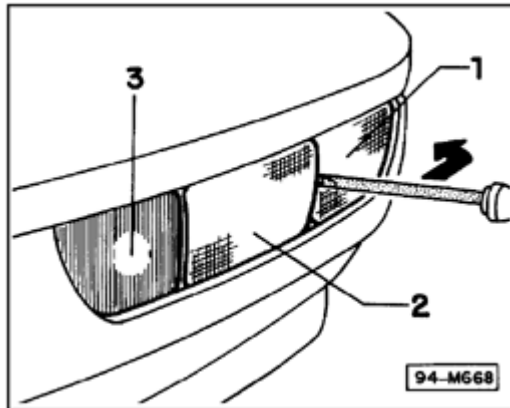

A

Fig. 2 Removing and installing towing eye cover (lens)

Removing

- Insert screwdriver between turn signal housing -1- and towing eye cover (lens) -2-. Carefully lift cover (arrow) from plastic retaining clips located on turn signal housing.
- Detach spring clips from opposite side or from fog light housing -3- (if equipped) and remove cover from opening.

CAUTION!

To avoid damaging the turn signal housing clips, insert a screwdriver between the housing -1- and towing eye cover (lens) -2- and NOT between the cover and bumper opening or fog light.


Installing

- Inspect plastic retainer clips located on turn signal housing (clips must not be broken or deformed).
- Insert cover at 30° angle into turn signal housing clips and make sure metal pin on rear of cover engages fully.

CAUTION!

To avoid damaging the turn signal housing clips, do not insert cover at more than a 45° angle.

- Carefully swing cover into opening and engage spring clips.

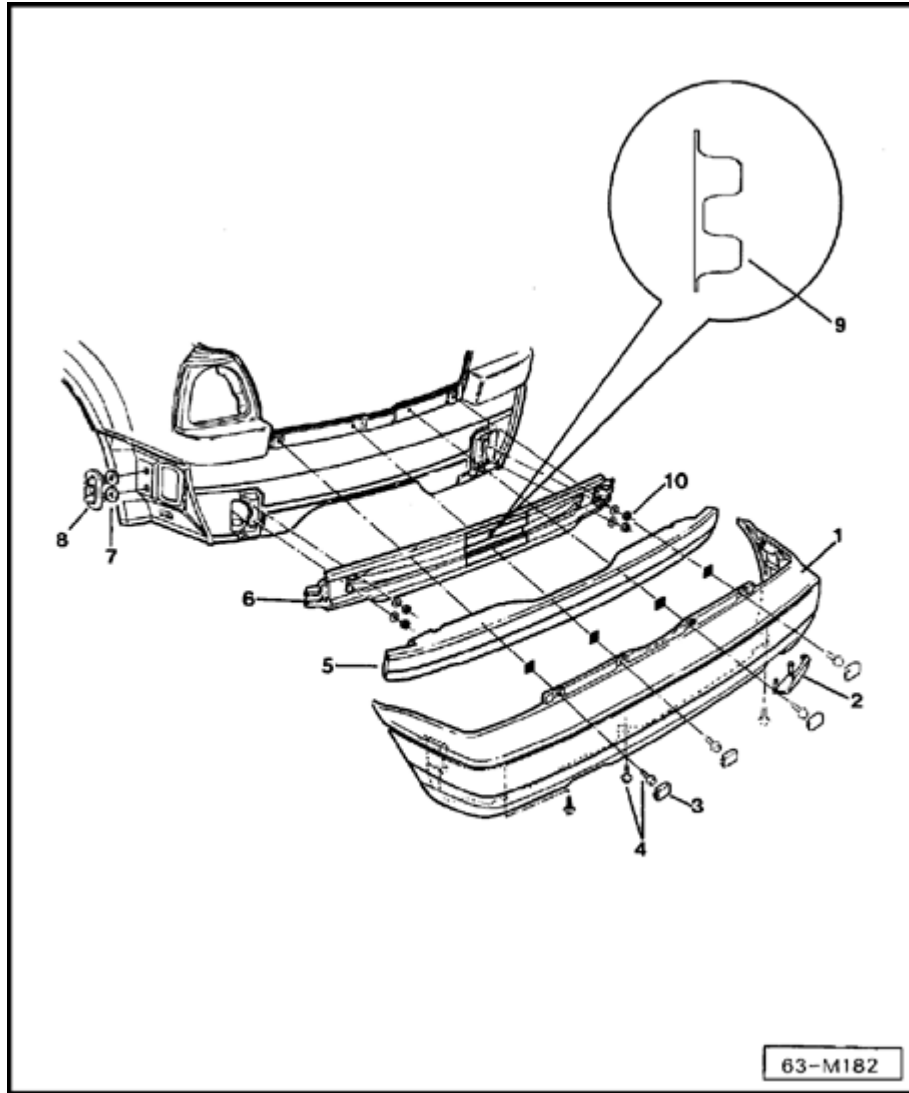

Rear bumper, removing and installing

1 - Cover

◆ Material: PP/EPDM

2 - Towing eye cover

3 - Cover for upper hex-head screws (four)

4 - Hex-head screws (seven)

◆ 4.5 Nm (40 in. lb)

5 - Plastic foam

6 - Carrier


7 - Plastic insulator

8 - Guide

9 - Carrier reinforcement

10 - Nuts and washers (four)

◆ 11-13 Nm (8-10 ft lb)

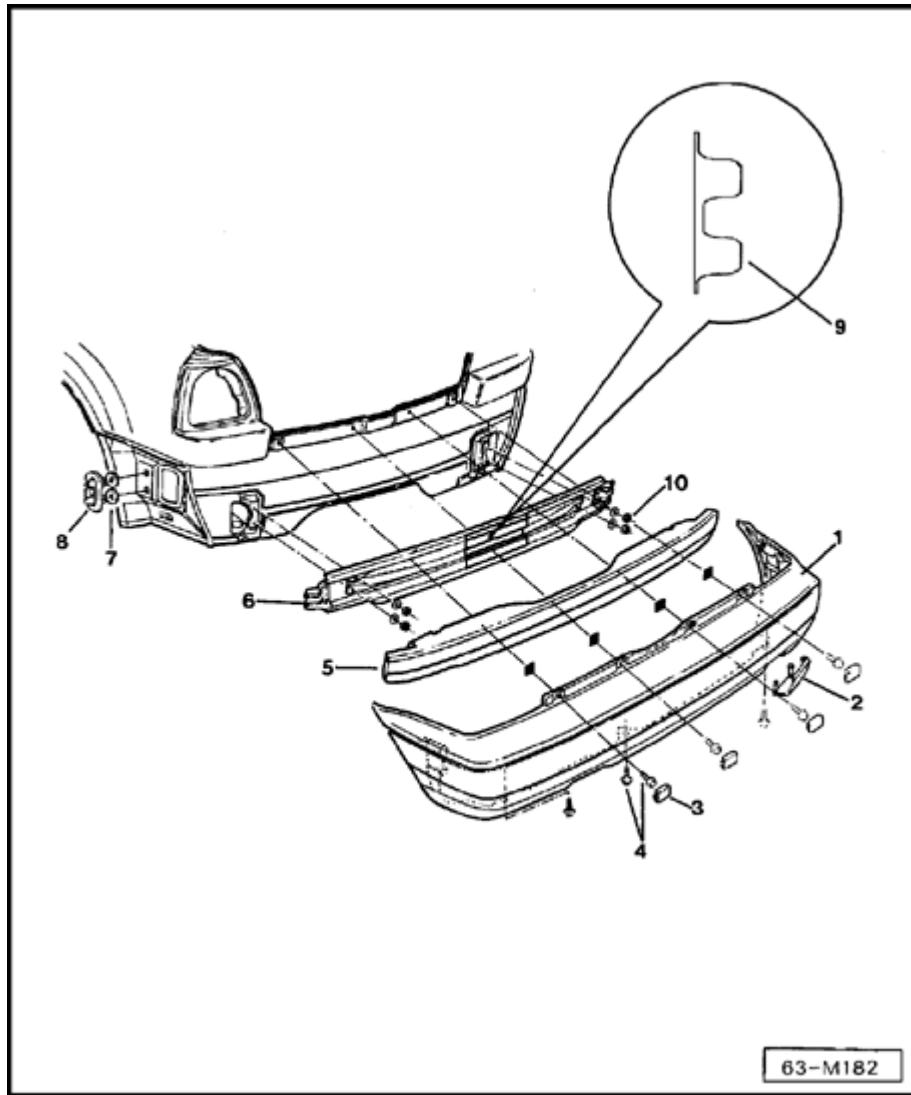

Removing bumper cover

- Open rear lid.
- Pry off (four) covers -3-.
- Remove (seven) hex-head screws -4- and pull bumper out of side guides -8-.

Removing bumper carrier

- Remove (four) nuts with washers -10- and pull bumper carrier out.